


SONICWARE

ELZ_1 Version 4 Manual Supplement

Rev.1.0

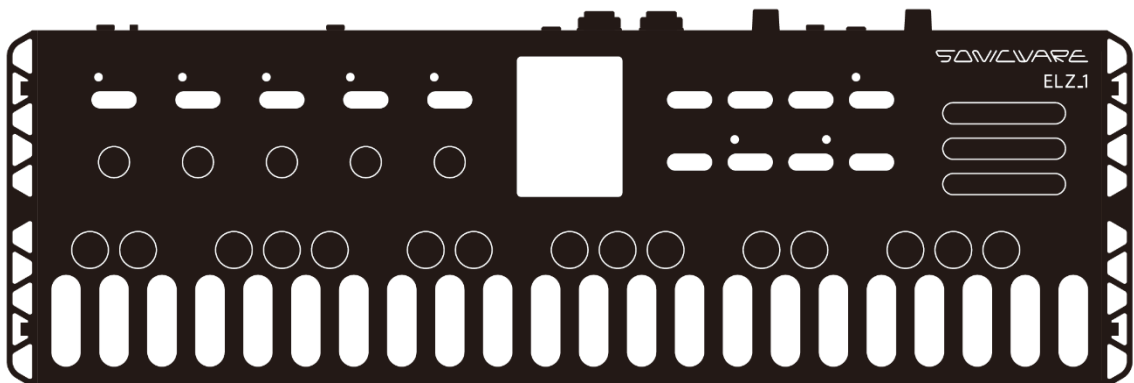

1 About this manual

This manual explains features added in the Version 4 SYSTEM firmware.

2 Added MIDI OUT function

NOTE ON/OFF, PROGRAM CHANGE, and MIDI clock transmission functions have been added.

2.1 Setting the MIDI OUT channel

- ① Press the MENU button.
- ② Use the DOWN and UP buttons to select MIDI.
- ③ Use the DOWN and UP buttons to select TX CHANNEL, and press the OK button.
- ④ Use the DOWN and UP buttons to select the desired channel and press the OK button.

HINT

- *The setting range is 01 – 16 and Off.*

2.2 Setting the CLOCK OUT

- ① Press the MENU button.
- ② Use the DOWN and UP buttons to select MIDI.
- ③ Use the DOWN and UP buttons to select CLOCK OUT, and press the OK button.
- ④ Use the DOWN and UP buttons to select ON/OFF and press the OK button.

3 Saving USB MIDI Mode

MIDI HOST MODE and MIDI DEVICE MODE settings will be saved even when the power is turned off.

HINT

- *When the USB host cable is unplugged from the ELZ_1, USB MIDI will be OFF.*

4 Changing the MENU

The following menu items have been changed.

MENU	SUB MENU	NOTE
PATTERN	-	Independent from SEQUENCER
MIDI	TX CHANNEL	Newly added
CLOCK	-	Independent from SEQUENCER
CLOCK	SOURCE	Name changed from CLOCK
CLOCK	SYNC OUT	Newly added in place of SYNC Thru in SOURCE.

SONICWARE

SONICWARE INC.

www.sonicware.jp

ELZ_1_AD3M_EN_A