

# ELZ\_1 play V2 Update Guide

*[Note] Use the AC adapter or new batteries.*


*Never interrupt the power during a firmware update.*

**1** Using the ELZ\_1 play's USB mass storage mode or connect the storage card to the PC/Mac by inserting it into the PC/Mac's SD card slot.

**2** Unzip the downloaded update file (.zip) and copy the two binary files; "ELZ\_1 play.bin" and "ELZ\_1 play Contents.bin" to the root folder on the storage card.

*\*The file [Waldorf-Edition-LE\\_CouponCode.pdf](#) contains the coupon code for Waldorf Edition 2 LE. Please visit the Waldorf Music website and follow the instructions to redeem it.*

**3** Deactivate the ELZ\_1 play's USB mass storage mode or remove the storage card from the PC/Mac and insert it into the ELZ\_1 play.

**4** While pressing  button, press and hold the power button.

**5** Select SYSTEM UPDATE and press OK.  
When Are you sure? is indicated, press OK again to start the update.

**6** After the update completes, turn off the power and turn it on again.

**7** To replace all MEMORY banks with the new V2 presets, select RESET from the MENU to perform a factory reset. (Back up your presets beforehand, as all data will be erased.)

To import only specific MEMORY patches or banks, do not perform a factory reset — just import the MEMORY files on the update page. (For details on the import procedure, please refer to the manual.)