






# Updating the ELZ\_1 play firmware

---

The ELZ\_1 play firmware can be updated by connecting the ELZ\_1 play to a PC or Mac by USB and transferring an update file.

- 1 Download the latest firmware from the SONICWARE website and copy it to the external card storage. See “Accessing the ELZ\_1 play card from PC/Mac (USB mass storage mode)” (→ P.124)  
Copy to

"USB Drive:\ELZ\_1 play.bin"

- 2 Turn the ELZ\_1 play power off.
- 3 Turn the power on while pressing the  button.
- 4 Use the   buttons to select SYSTEM UPDATE.
- 5 Press the  button.
- 6 If there are no problems in the firmware file check, press the  button to start the update.
- 7 When “Please restart” is shown, turn the ELZ\_1 play off.
- 8 Turn the ELZ\_1 play on again.

## **POINT!**

---

- If operating on battery power, use new batteries.
  - Do not interrupt the power supply during an update. Doing so could make the unit unable to start properly.
  - Recognition of the ELZ\_1 play could take about 10–30 seconds the first time it is connected, depending on the type of PC/Mac.  
Do not disconnect the USB cable or turn the power off before it is recognized.
-