


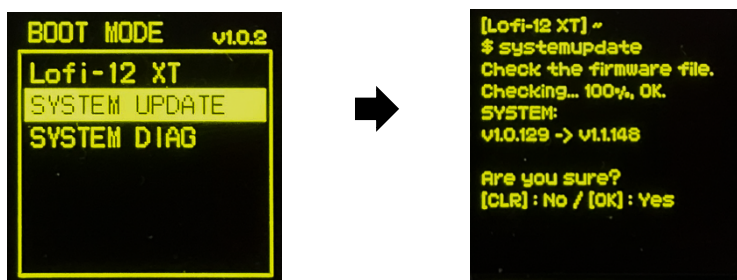
# Lofi-12 XT v1.1 Update Guide

*[Note] Use the AC adapter or new batteries.*

*Never interrupt the power during a firmware update.*

- 1 Using the Lofi-12 XT's card reader mode or connect the SD card to the PC/Mac by inserting it into the PC/Mac's card slot.
- 2 Unzip the downloaded firmware (.zip) and copy the binary file (Lofi-12 XT.bin) to the root folder on the SD card.
- 3 Deactivate the Lofi-12 XT's card reader mode or remove the SD card from the PC/Mac and insert it into the Lofi-12 XT.
- 4 While pressing  button, press and hold the power button.
- 5 Select SYSTEM UPDATE and press OK.

When Are you sure? is indicated, press OK again to start the update.



*Screen display varies by version*

- 6 After it completes, turn off the power and turn it on again.
- 7 On the SND screen, push the A knob to display TAG SEARCH, push B knob to update the audio file database.

