
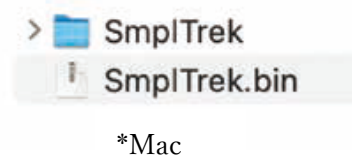



SONICWARE

SmplTrek Firmware Update Guide

Caution : Please update without using SmplTrek's card reader mode because Ver.1.1.72 fixes the card reader mode issue.

- ① Download the firmware (.zip) from the following URL.
<https://sonicware.jp/pages/downloads>
- ② Connect the card to the PC/Mac by inserting it into the **PC/Mac's card slot** or using a **commercially available card reader**.
- ③ Unzip the downloaded firmware (.zip) and copy the binary file (SmplTrek.bin) to the root folder on the card.

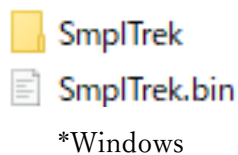


- ④ Remove the card from the PC/Mac and insert it into SmplTrek.
- ⑤ While pressing  , press and hold the power button.
*** Please use AC adapter or new batteries.**
- ⑥ When the update Screen opens, select SYSTEM UPDATE, and press OK.



- ⑦ Press OK to start the update.

**Never turn off the power while updating.*

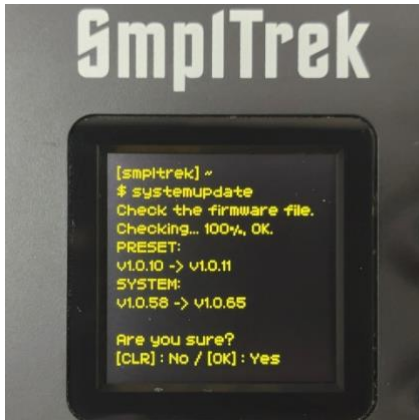

- ⑧ After it completes, press the power button to shut the unit down. Then, restart it.

