



SONICWARE

SmplTrek Firmware Update Guide

- ① Download the firmware (.zip) from the following URL.
<https://sonicware.jp/pages/downloads>
- ② Connect the SD card to the PC/Mac by inserting it into the **PC/Mac's card slot** or using the **SmplTrek's card reader mode**.
- ③ Unzip the downloaded firmware (.zip) and copy the binary file (SmplTrek.bin) to the root folder on the SD card.

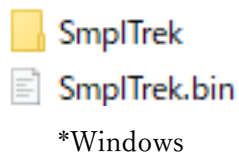

- ④ Remove the card from the PC/Mac and insert it into SmplTrek or deactivate the SmplTrek's card reader mode
- ⑤ While pressing  , press and hold the power button.
** Please use AC adapter or new batteries.*
- ⑥ When the update Screen opens, select SYSTEM UPDATE, and press OK.



- ⑦ Press OK to start the update.

*Never turn off the power while updating.



The screen display varies by the version.

- ⑧ After it completes, press the power button to shut the unit down. Then, restart it.

